

# CLIPSAL SMOKE ALARM: TROUBLE-SHOOTING SHEET

**WARNING: CHECK FOR FIRE AND/OR VACATE PROPERTY BEFORE ASSUMING FAULT ONLY**

STEP ONE: IDENTIFY THE TYPE OF SOUND YOUR ALARM IS MAKING.

a) If your alarm is emitting a 'chirping' noise; a short burst of sound every 40 seconds:

*The back-up battery in your alarm may be low on charge, or flat.*

b) If your alarm is sounding loudly and the red LED light is flashing rapidly, as it would during a fire:

*Your alarm may have detected something resembling smoke, or have been triggered by insects or an external electrical surge.*

STEP TWO: IDENTIFY THE TYPE OF CLIPSAL ALARM YOU HAVE.

a) If your alarm is a 10 year lithium, radio-frequency alarm it will be round, with a round hush button in the middle.

b) If your alarm is a 240-volt hard wired alarm, it will be round with a rounded-rectangle hush button in the middle.

STEP THREE: IDENTIFY AND DISARM THE TRIGGERING ALARM/S.

a) Look for the alarm/s displaying a red LED flashing.

b) Where 10 year lithium radio-frequency alarms are installed, press the 'Push to Test/Hush' button in on each alarm.

Only the 'Push to Test/Hush' button on the triggered alarm/s will hush the others.

c) Disarm the identified problem smoke alarms – all interconnected alarms will then stop sounding within one minute.



d) For further assistance, contact your Property Manager or Smoke Alarm Integrity (1300 974 615) to arrange inspection. Please ensure any problem alarms are reported regardless of success with disarming as attendance by a technician will be required.

## To Disarm CLIPSAL 755LPSMA4 10 Year Lithium Radio-Frequency Smoke Alarm

- Press the '**Push to Test/Hush**' button in to stop the sounding.
- Locate the **locking clip** and use a flat head screwdriver to hold the locking clip upwards.
- Turn the alarm counter-clockwise and remove. The alarm will turn off during this procedure.
- Leave the alarm in a safe place so our technician can find this on attendance.

Push to Test / Hush Button

Locking Clip – Note Where  
Small Arrow or 'V' is  
Located on the Alarm.

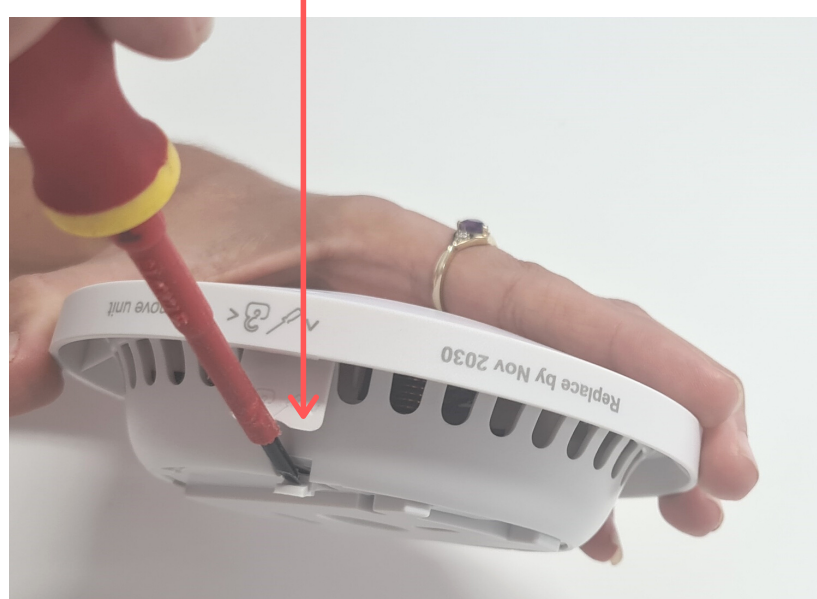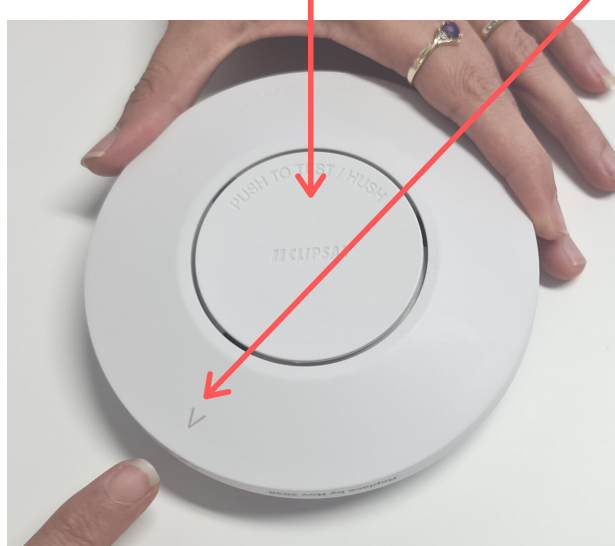

## To Disarm CLIPSAL 755PSMA4 240-Volt Hardwired Smoke Alarm

- Locate the small **latch** at the side of the alarm and push this in. The alarm will now drop open like a clam shell.
- Remove the **battery**.
- Hold the '**Hush/ Push to Test**' button in for a few seconds to drain the power.
- Leave the alarm open, with the top hanging down. Do not close and do not reinstall the battery.

Hush / Push to Test Button

Battery

Latch

